



Thank you for purchasing "KOSO radar series speedometer", led night-back-lighted, multi-function in one, easy-wiring. Clear-controlling and easy-using.

#### **∧** Notice

- 1. The lcd meter is apply for DC 12V.
- 2. for installation, please follow the steps described in manual, any damage caused by wrong installation shall be imputed to the users.
- 3. don't break or modify the wire terminal, to avoid the short circuit, please don't pull the wire when installing.
- 4. do not disassemble or change any parts excluding the manual description.
- 5. the interior examination or maintenance should be executed by our professionals.

6.if you find the needle is auto-reset by itself, please check your battery situation. if the battery can't provide enough voltage, it will cause the meter auto-reset. MARK MEANING:

NOTE You could get the installation details from the information behind the mark


♠ Some processes must be followed to avoid the affection caused by wrong installation.

**A WARNING!** Some processes must be followed to avoid damages to yourself or the public

A CAUTION! Some processes must be followed to avoid the damage to the vehicle.

#### 1 Accessory



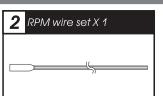








NOTE Please contact the local distributor if the items you open are not the same, with the above-listed one

#### 2 Wiring installation instructions

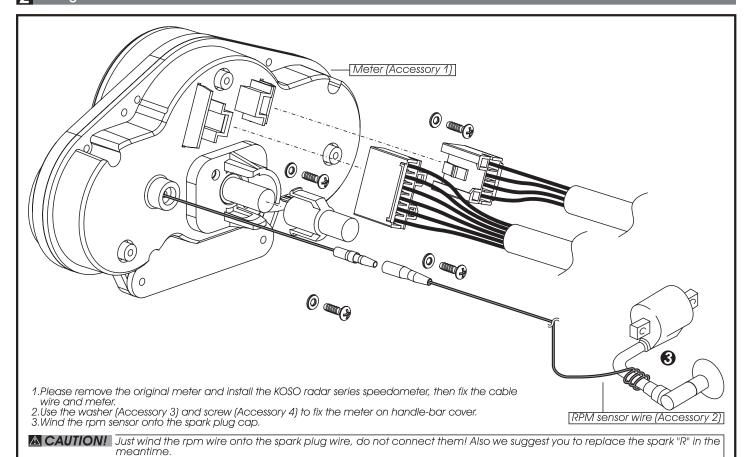





- Display range: 16levels.
- The fuel reserve symbol begins

Temperature

- ●Display range: 0~120 °C.
- Display unit: 1 °C.

Odo meter

■Display range: 0~99999 km, reset automatically after 99999 km. Display unit: 1 km.

Trip meter

•Display range: 0~999.9 km. reset automatically after 999.9 km. •Display unit: 0.1 km.

Temperature warning light ●Setting range: 60~120°C.

Adjusting unit: 1 °C. Regarding the setting, please check **4-3** 

Speeding warning light

•Setting range: 30~160 km/h. Adjusting unit: 5 km/h. Regarding the setting, please check **4-1**.

Tachometer warning light

•Setting range: 5000~15000 RPM.

Speedometer

Adjusting unit: 100 RPM.

• display unit: km/h / MPH.

>Regarding the setting, please check 4-2.

•Display unit: 100 RPM.

**•** display range: 0~160 km/h. 0~100 MPH



## **4-1** Speeding warning light setting instruction.



In main screen, press down the **SELECT** & **ADJUST button** for 3 seconds to enter the speeding warning light setting screen.

A CAUTION! Please start the setting stopped (0 km/h).

Press the **ADJUST button** to select the number Press the **SELECT button** 3 times to back the you want to set. (Now you are in the speeding warning light setting screen)

**NOTE** Setting range: 30~160 km/h Adjusting unit: 5 km/h.

Now **30** (The number you want to set) & speed is flashing.

NOTE Hold down the ADJUST button to increase the setting number fast.



main screen

EX. The setting is changed from 30 km/h to 60

Now 60 (The number you want to set) & **speed** is flashing.

NOTE The setting screen is a circle in order as the following, the speeding warning setting> the tachometer warning setting> the temperature warning setting> main screen.



#### **4-2** Tachometer warning light setting instruction.



In main screen, press down the **SELECT** & **ADJUST button** for 3 seconds to enter the speeding warning light setting screen.



Now in setting screen. Press the **SELECT button** 1 time to enter the tachometer warning light setting screen.

Press the **ADJUST button** to select the number vou want to set.

Now **30** & **speed** is flashing.

NOTE Setting range: 5000~15000 RPM. Adjusting unit: 100 RPM.

Now **5000** (The number you want to set) & tachometer warning light is flashing.





Press the **SELECT button** 2 times to back the main screen. EX. The setting is changed from 5000 RPM to 8000 RPM.

Now **8000** (The number you want to set) & **tachometer warning light** is flashing.

Main screen.

# **4-3** Temperature warning light setting instruction.



In main screen, press down the **SELECT** & **ADJUST button** for 3 seconds to enter the speeding warning light setting screen.



Now in setting screen, press the **SELECT button** 2 times to enter the temperature warning light setting screen.

<u>Now 30 & speed</u> is flashing.



Press the **ADJUST button** to select the number you want to set.

NOTE Setting range: 60~150 °C. Adjusting unit: 1 °C.

Now 60 (The number you want to set) & temperature warning light is flashing.



press the **SELECT button** to back the main

screen. EX. The setting is changed from 60 °C to 90 °C.

Now 90 (The number you want to set) & temperature warning light is flashing.



Main screen.

## 5 Trip reset instruction



In main screen, press the **ADJUST button** to switch the odometer to trip meter.



Press down the **ADJUST button** for 3 seconds, Now the trip meter is reset. and then the trip meter will be reset.



wh802ba001